

## Feature and Benefits

- Easy to use, direct and complete fire alarm graphic software
- Dongle activation key
- Auto Display of all kinds of events such as Fire, Pre-alarm, Action, Supervisory, Disable and Fault in different color.
- Display the full device details, time of alarm and location and save directly maintenance record folder
- Multiple users can monitor and control at the same time
- User privileges can be defined
- Support remote control of control panel
- Support common toolbar for quick operation
- Support up to 8 client users



## Overview

With LF-X500 panel design a new set of software engineering monitoring system, through good architecture designed to meet various requirements of stand-alone monitoring system, network and other aspects of the system, the system is easy to operate, the interface is beautiful and generous.

The graphic display device is connected with the fire alarm panel through the RS232 interface, and is connected with the remote monitoring center through the RJ45 network port, so as to realize the real-time monitoring of the fire alarm panel and the field equipment information.

## System Components

Graphical display device software is composed of two parts, server and client.

Server as a bridge between the panel and the client is mainly used to manage communications between the client and the panel, set user permissions, verify the legitimacy of the user, and record user login information, and a panel connection status.

The client is mainly used to receive the status information of the field equipment which is uploaded by the panel. It is displayed in real time and classification, and records the fire alarm information and the system operation log.

## Activating the Graphic Monitoring Software

A Dongle is a USB that acts as an activation key, Graphic Monitoring Software is in the download e-mail that was sent when the purchase was made. Once the software is installed, plugged the USB in the machine, the server software should straight read the code and is now activated. The dongle must be kept in the machine at all times to keep the server running. For any questions or concerns, please contact LIFECO distributor directly.

## Technical Specification

**System Requirement:** Windows 7, Windows 10 or later.

**CPU:** P4 1G and above

**RAM:** 2G and above

**HDD:** 8G and above